



**Simplicity**  
A U S T R A L I A

# AIRSEEDER OPERATORS MANUAL

**Model:** PM2 4500  
**Serial No:**  
**Description:** Pull Mount, 4500 litre, 2 bin, Ground Drive, Farmscan 2200

*For Instruction On:*

Pull Mounted Machine Configuration  
Farmscan 2200 Monitor Operation  
Pull Mounted Ground Drive Operation

## Section 1: Introduction

|                                 |          |
|---------------------------------|----------|
| Welcome to Simplicity Australia | Page 1.1 |
| Company Profile                 | 1.2      |
| Product Overview                | 1.3      |

## Section 2: Safety

|   |          |
|---|----------|
| Safety Instructions – ‘Key Words’         | Page 2.1 |
| Location of Safety Decals – LHS and Rear  | 2.2      |
| Location of Safety Decals – RHS and Front | 2.3      |
| Road and Field Travel                     | 2.4      |

## Section 3: Operation

|   |           |
|---|-----------|
| Hooking up  | Page 3.1  |
| Filling and Emptying the Bins                         |           |
| • Filling   | 3.2       |
| • Emptying  | 3.3       |
| Air Seeder Calibration                                |           |
| • Determine Implement Sowing Width                    | 3.4       |
| • Determine Actual Tyre Circumference                 | 3.5       |
| • Determine Corrected Tyre Circumference              | 3.5       |
| • Determine Calibration Crank Turns per Hectare       | 3.6       |
| • Record of Calibration Results                       | 3.6       |
| Calibrating Sowing Rates                              | 3.7       |
| • Compaction Warning                                  | 3.8       |
| • Tips for Calibrating Sowing Rates                   | 3.9       |
| • Higher Sowing Rates                                 | 3.10      |
| • Product Flow (Bridging)                             | 3.10      |
| Air Delivery System                                   |           |
| • Overview  | 3.11      |
| • Setting the Blower Speed                            | 3.12      |
| • Checking Blower Speed                               | 3.13      |
| • Delivery Capacity and Calculating Delivery Rate     | 3.13      |
| Double or Triple Shooting and Splitting               |           |
| • Description and Background                          | 3.14      |
| • Illustration ‘One Pass Application’                 | 3.15      |
| • Plan View – Six Row Double Shoot                    | 3.16      |
| • Worksheet – Double or Triple Shooting and Splitting | 3.17      |
| Use of Air Restrictors                                | 3.18      |
| Use of Metering Unit Spool Covers                     | 3.19      |
| Use of Canola Covers                                  | 3.20      |
| Blocking Air Streams not in Use                       | 3.20      |
| Notes   | 3.21      |
| Calculating Bin Split                                 | 3.22      |
| Bin Split Plan  | 3.23      |
| Changing Bin Split                                    | 3.24      |
| Seeding Kit Terminology                               | 3.25–3.28 |
| Seeding Kit Set Up                                    | 3.29-3.30 |
| Monitor Description                                   | 3.31      |
| Notes   | 3.32      |

## Section 4: Maintenance

|  |          |
|--|----------|
| Lubrication and Maintenance Overview         | Page 4.1 |
| Daily Checklist                              | 4.2      |
| After Sowing Maintenance                     | 4.3      |
| Lubrication and Maintenance Schedule         | 4.4      |
| Location of Grease Points and Lube Intervals | 4.5      |
| Oil Levels                                   | 4.6      |
| Blower Maintenance                           | 4.7      |
| Hydraulic Filter Replacement                 | 4.7, 4.8 |
| Clutch Maintenance                           | 4.8      |
| Air Leak Check                               | 4.9-4.12 |
| Service and Repair Records                   | 4.13     |
| Notes  | 4.14     |

## Section 5: Troubleshooting

|                  |               |
|------------------|---------------|
| Sowing Operation | Page 5.1, 5.2 |
| Blower Operation | 5.3           |
| Notes            | 5.4           |

## Section 6: Miscellaneous

|                     |            |
|---------------------|------------|
| Tyre Pressure Guide | Page 6.1   |
| Useful Formulae     | 6.2        |
| Risk Assessment     | 6.3        |
| Notes               | 6.4        |
| Disclaimer          | Rear cover |